
$\mathsf{RYNO}^\mathtt{R}\,\mathsf{STOOL} \longrightarrow \mathsf{FLOOR}\,\mathsf{FIXING}$

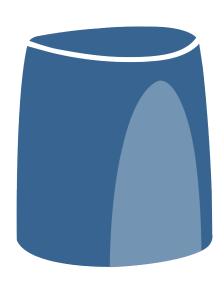


These instructions apply only when fixing to a concrete floor with no obstructions (e.g. under floor heating, cables, plumbing, etc.). When fixing to any other surface, or with obstructions, please contact your Pineapple representative for further advice

Wrench/socket set

REQUIRED ITEMS

→ 1x fixing template
 (only provided with floor fixed version)
 → 1x floor bracket
 (only provided with floor fixed version)
 → 1x M5 pointed screw
 (only provided with floor fixed version)
 → 4x concrete hardware fixings
 → 1x masonry drill bit
 → Handheld power drill
 → 1x T25 security drill bit

$\mathsf{RYNO}^\mathtt{B}\operatorname{\mathsf{STOOL}} o \mathsf{FLOOR}\operatorname{\mathsf{FIXING}}$

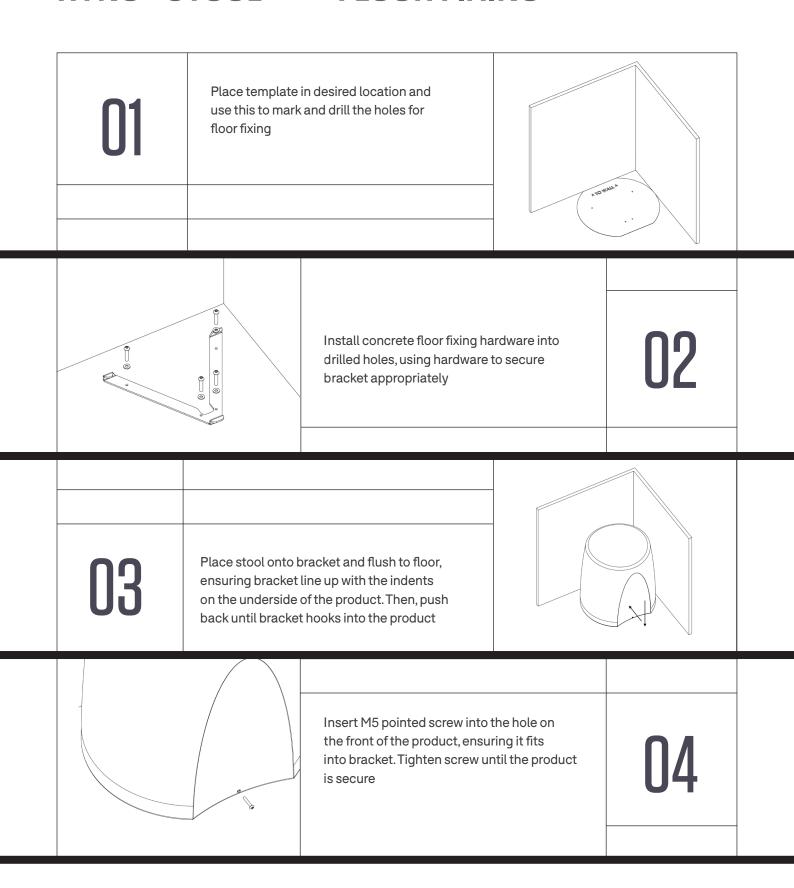

DISCLAIMER

 → Ensure the proper and adequate hardware is used to secure furniture → Ensure fixings are appropriate for the anchoring material → Use fixings of an appropriate strength and consider using security fixings in challenging environments → Consider using high strength thread-locker on fixings in challenging environments → Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary → Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result inadequate product installation and void of warranty → Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user