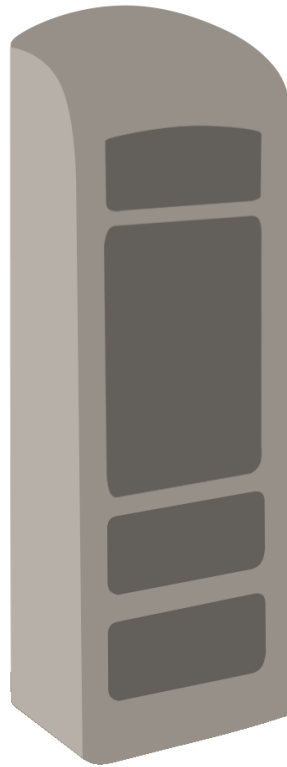


RYNO[®] OPEN WARDROBE

→ FLOOR & WALL FASTENING



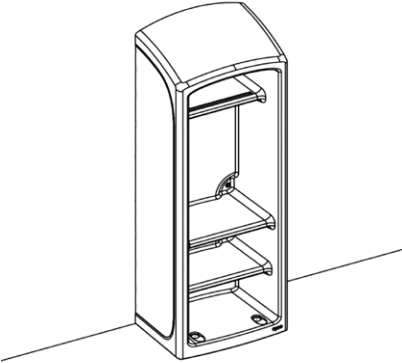
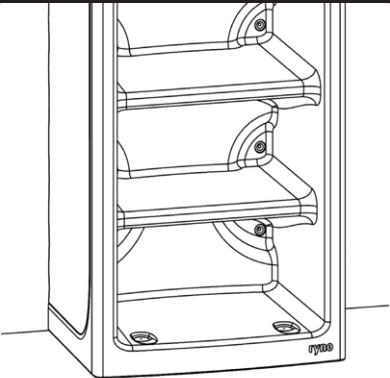
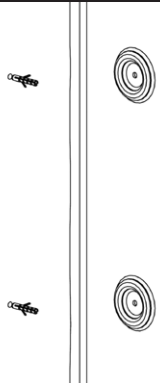
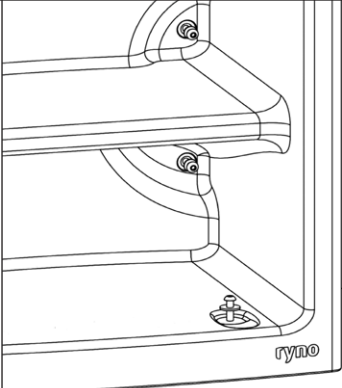
These instructions apply only when fixing to a concrete floor, or brick wall, with no obstructions (e.g. under floor heating, cables, plumbing, etc.). When fixing to any other surface, or with obstructions, please contact your Pineapple representative for further advice

REQUIRED ITEMS

- 9 x concrete hardware fastenings
- 1 x wood drill bit
- 1 x masonry drill bit
- Handheld power drill
- Wrench/socket set

RYNO[®] OPEN WARDROBE

→ FLOOR & WALL FASTENING

<h1>01</h1>	<p>Place product in desired location</p>	
	<p>Drill through all 9 rear fixing points and the two floor fixing points (if also fixing to the floor) using a wood bit and then into the wall using a masonry bit</p>	<h1>02</h1>
<h1>03</h1>	<p>Remove product and install suitable hardware into the wall (and floor if also fixing to the floor)</p>	
	<p>Replace product and secure unit to wall using appropriate bolts and washers</p>	<h1>04</h1>

DISCLAIMER

	<ul style="list-style-type: none">→ Ensure the proper and adequate hardware is used to secure furniture→ Ensure fastenings are appropriate for the anchoring material→ Use fastenings of an appropriate strength and consider using security fixings in challenging environments→ Consider using high strength thread-locker on fastenings in challenging environments→ Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary→ Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result in inadequate product installation and void of warranty→ Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user→ All products must be secured to the wall and not freestanding to avoid risk of injury



800.496.9324

inquiries@pineapplecontracts.com

