



HUSH ACOUSTIC PANELS → WALL FIXING

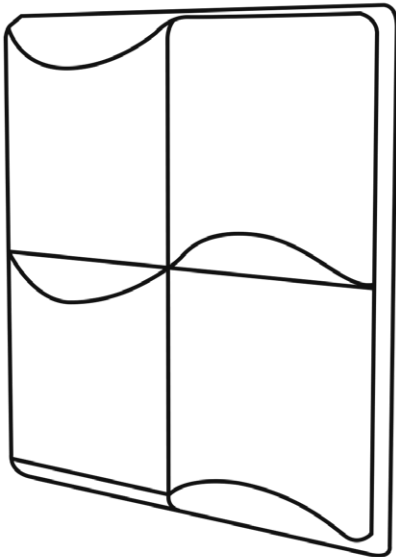

<h2>REQUIRED ITEMS</h2>	<ul style="list-style-type: none">→ Long straight edge→ Spirit level→ Evo-Stik “Sticks Like” adhesive→ Applicator/caulking gun→ Tile spacer (supplied)	
-----------------------------	--	---

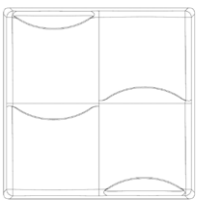



800.496.9324
inquiries@pineapplecontracts.com



HUSH ACOUSTIC PANELS → WALL FIXING

01

Measure out the space needed to be covered (depending on number of tiles). Mark out the area and add a centerline using tape.

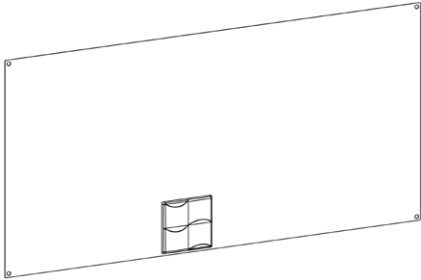
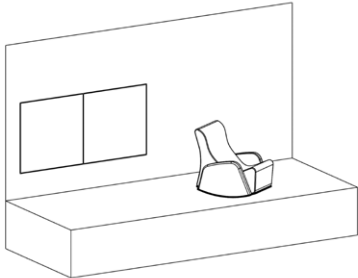


For a non-permanent fixing of HUSH consider using a backing panel such as plasterboard.

02

03

Prepare the adhesive by following the instructions on the tube and insert into the cartridge gun

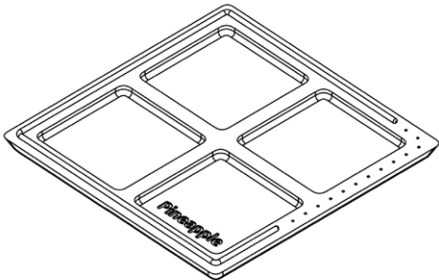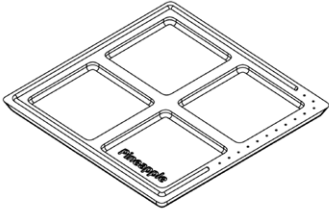

Apply a thin bead (approx. $\varnothing 0.1''$) of adhesive to the back edges of the panel along the center of the face

04



800.496.9324



inquiries@pineapplecontracts.com

Pineapple

HUSH ACOUSTIC PANELS → WALL FIXING

05

Fix the panel to the wall using the centerline as a guide. Ensure the panel is firmly stuck on all four edges

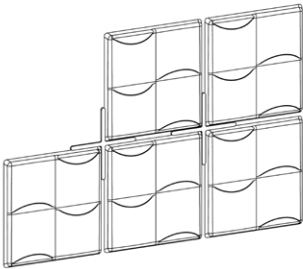
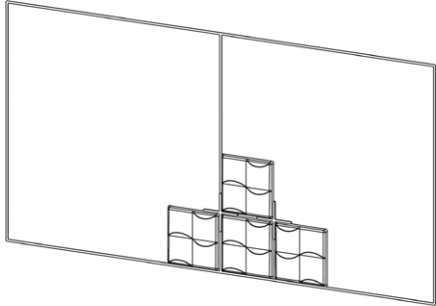


Using the spacer tool if necessary, build up the desired pattern

06

07

Use a spirit or laser level to ensure the panels reman aligned

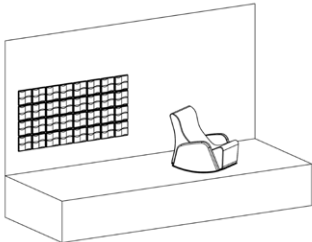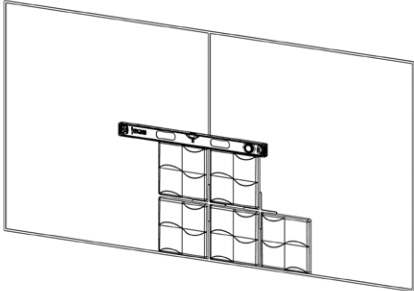

The panel's position can be adjusted for up to 15 minutes. Wipe off any excess adhesive with a cloth or white spirit.

Leave to cure for 24 hours.

08



800.496.9324
 inquiries@pineapplecontracts.com

Pineapple

DISCLAIMER

	<ul style="list-style-type: none">→ Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result in inadequate product installation and a void of warranty→ Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user

