
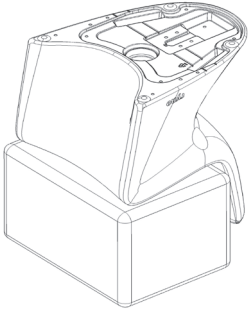
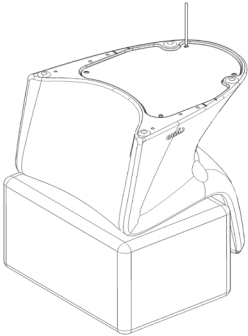
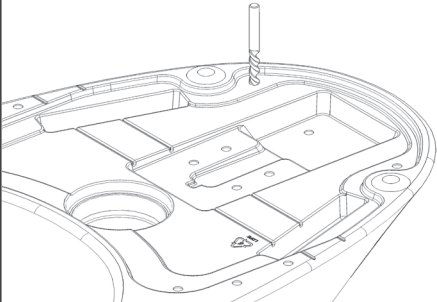


RYNO[®] DINING CHAIR 2.0 → BASE COVER PLATE

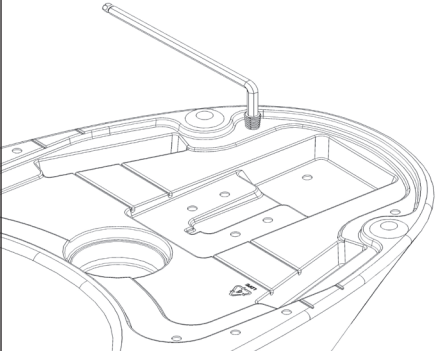


REQUIRED ITEMS	→	Ryno Dining Base Cover Plate	
	→	X4 M10 Type D wood inserts	
	→	X4 M10x20 Security Pin Torx	
	→	13mm Drill Bit	
	→	10mm Hex Drive Wrench (Allen wrench)	
	→	Handheld power drill	
	→	Center punch or similar marker	

RYNO[®] DINING CHAIR 2.0 → BASE COVER PLATE

01	Place dining chair upside-down on a supporting surface, ensuring a furniture blanket is used to keep the product from scratching.	
	Place the cover plate into the opening on the base and mark the 4 locations for the inserts using the center punch.	02
03	Remove the plate and accurately drill through the 4 marked points with the drill bit and power drill.	
	Install the X4 M10 wood inserts using the Hex Wrench ensuring the inserts lay flush to the surface of the product.	04



RYNO[®] DINING CHAIR 2.0 → BASE COVER PLATE

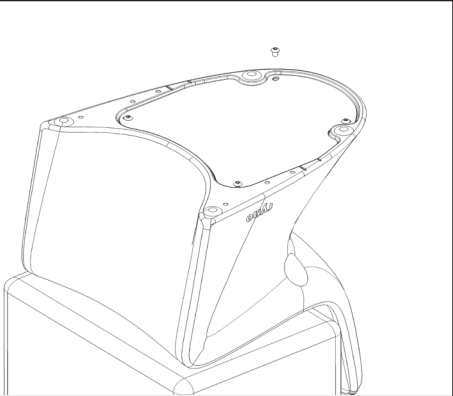05	Place the Base Cover Plate back into the opening and secure using X2 M10 Pin Torx bolts.	



800.496.9324



inquiries@pineapplecontracts.com

DISCLAIMER

	<div>→ Ensure the proper and adequate hardware is used to secure furniture</div> <div>→ Ensure fixings are appropriate for the anchoring material</div> <div>→ Use fixings of an appropriate strength and consider using security fixings in challenging environments</div> <div>→ Consider using high strength thread-locker on fixings in challenging environments</div> <div>→ Ensure all gaps are sealed with the appropriate anti-pick caulk after product installation if necessary</div> <div>→ Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result inadequate product installation and void of warranty</div> <div>→ Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user</div>