

RYNO[®] ADIRONDACK

→ FLOOR FIXING INSTRUCTIONS




WARNING: Read this document prior to installation.

Version 1


Release date: 09/14/26

Pineapple


REQUIRED EQUIPMENT

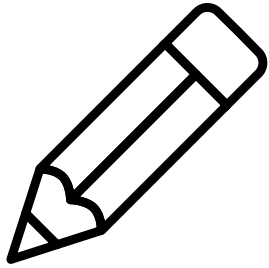


→ Marking tool
(not supplied)

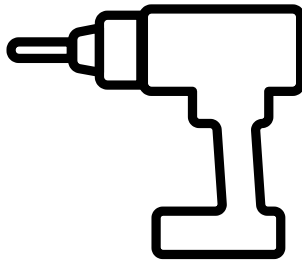

→ Cordless drill
(not supplied)

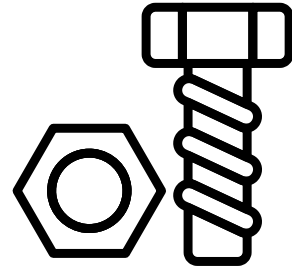

→ Appropriate floor
anchoring hardware
(not supplied)

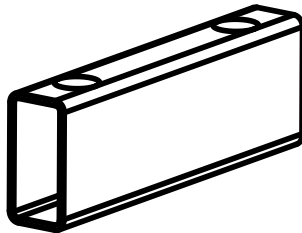


→ Floor-fixing blocks
and fasteners
(provided)

RYNO® ADIRONDACK FLOOR FIXING INSTRUCTIONS


01

→ Position the chair in the desired location and slide the templates underneath, ensuring the guidelines align with the drill points. Secure the templates to the floor with tape.

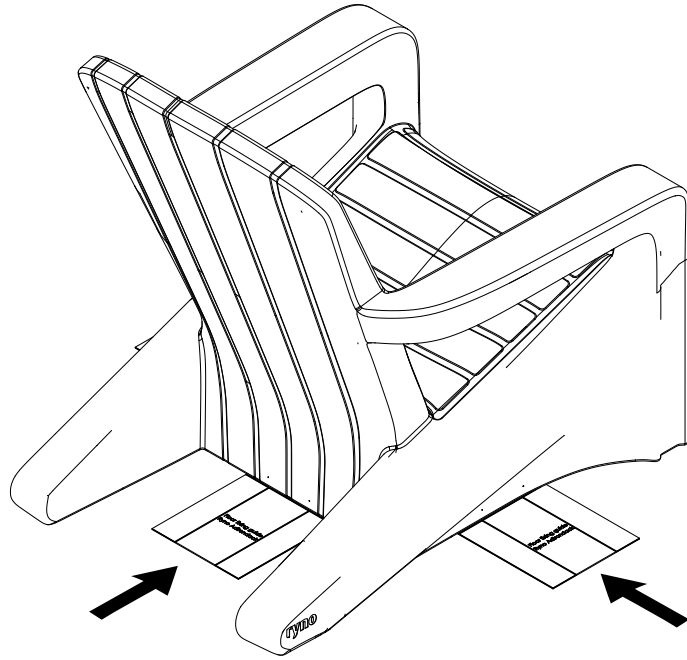

02


→ Remove the chair and use the guides to mark the mounting holes for the floor brackets. Drill the holes and secure the brackets to the floor using appropriate anchors and bolts.

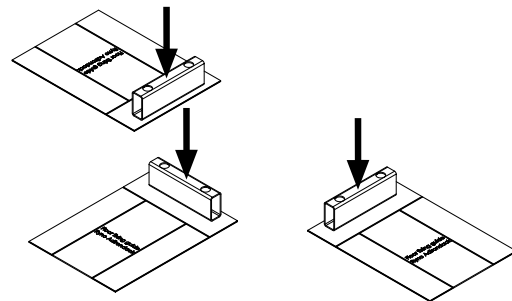

RYNO® ADIRONDACK FLOOR FIXING INSTRUCTIONS


03

→ Lower the chair onto the brackets, ensuring they fit securely into the designated channels and the chair sits

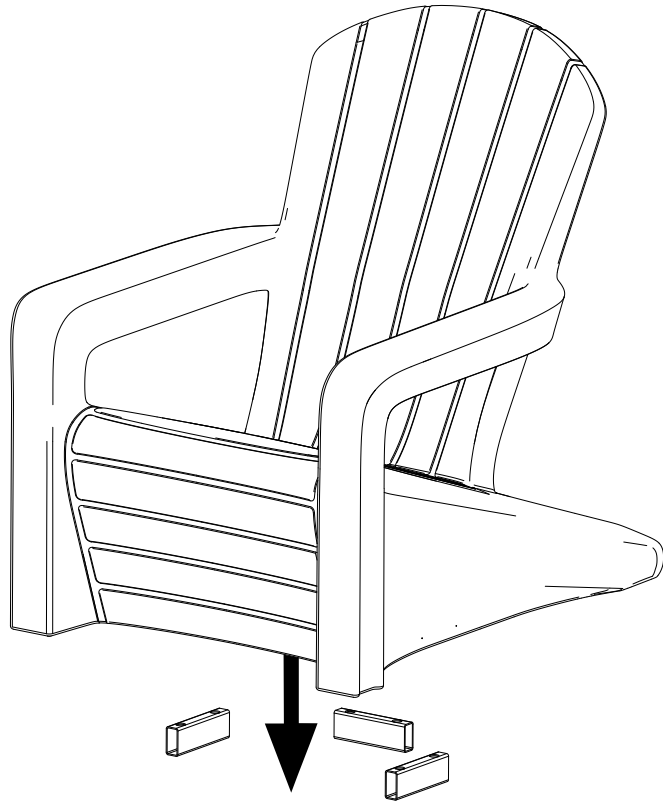

04

→ Install the provided screws using low torque. Ensure the screw heads sit below the surface of the chair and that each screw extends through both sides of the bracket.

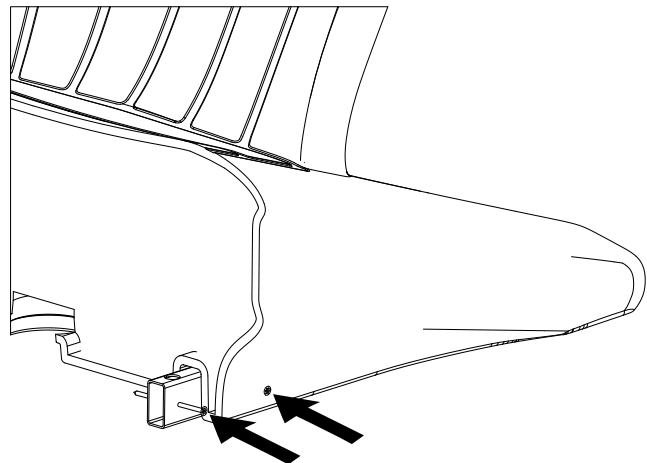

DISCLAIMER

	→ Ensure the proper and adequate hardware is used to secure furniture → Ensure fixings are appropriate for the anchoring material → Use fixings of an appropriate strength and consider using security fixings in challenging environments → Consider using high strength thread-locker on fixings in challenging environments → Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary → Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result inadequate product installation and void of warranty → Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user